



(diagram 1)

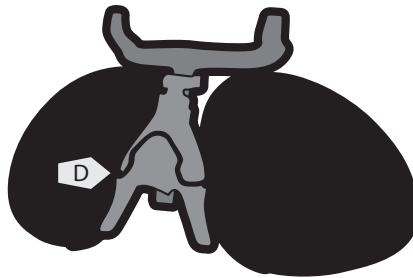

(diagram 2)

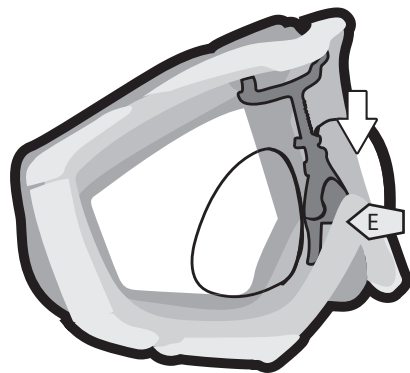

(diagram 3)

TURBO FAN INSTALLATION

STEP 1: ODS PREPARATION

Remove the ODS from the rubber nose piece supplied. Placing your thumb on the tabs of the slide-lock (A) at the back of the ODS Goggle Adapter, release the lock and slide the hanger (B) down to rest on the top notch (diagram 1). With the raised horseshoe (C) on the ODS adapter facing toward you, align the ODS wire with the raised horseshoe and snap the wire into the notches on both sides of the ODS adapter (D), ensuring the concave sides of your Rx prescription lenses are facing away from you (diagram 2).

STEP 2: ODS INSERTION

With the inside of the goggle facing toward you, place the horns of the hanger (B) against the top of the frame right behind the lens, centering the hanger (B) on either side of the fan (diagram 3). Ensure that the concave side of your Rx prescription lenses is facing toward you.

STEP 3: SECURING THE ODS ADAPTER

Once the hanger (B) of the ODS adapter has been properly inserted, hold the hanger to the top of the frame with one hand. Using your other hand, slide the bottom of the ODS adapter downward to rest on the goggle nose bridge (E). This will secure the adapter and position the lenses in front of your eyes (diagram 3).

NOTE:

If you removed the entire goggle lens, reinsert the lens by first securing the nose tabs and then work the goggle lens around into the frame so that only the center portion of the top of the lens is exposed. Once the entire lens is reinstalled, repeat steps 1, 2, and 3.

CLEAR VISION TIP:

Use a No Fog Cloth on your ODS prescription lenses to avoid fogging and to ensure clear vision.

